 
 


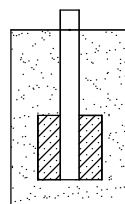


Leikin ja liikunnan edelläkävijä.

## 4030 Leikkiveturi asennusohje

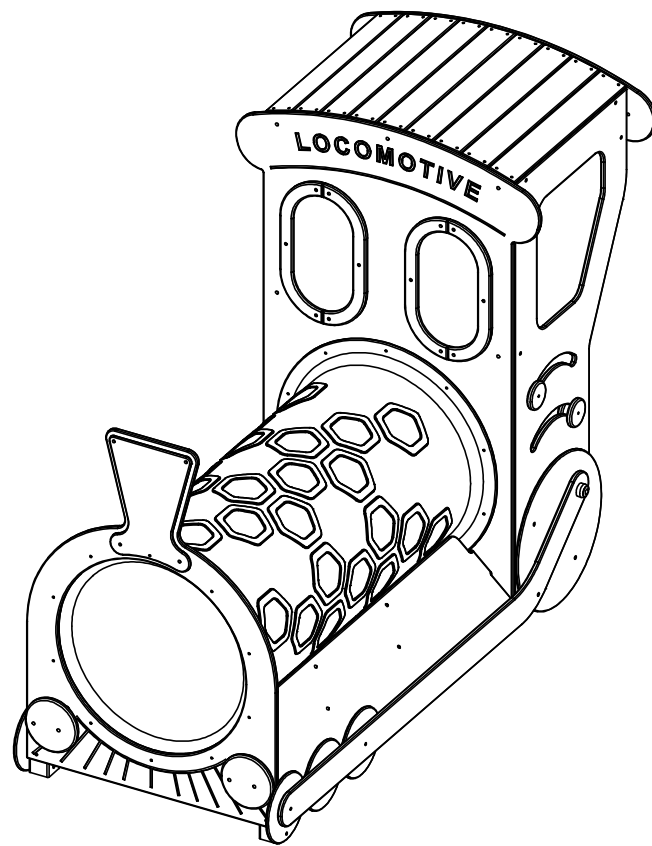

 4030N

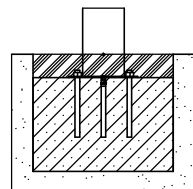


4030F

NRO

OSA


4030N

 E1

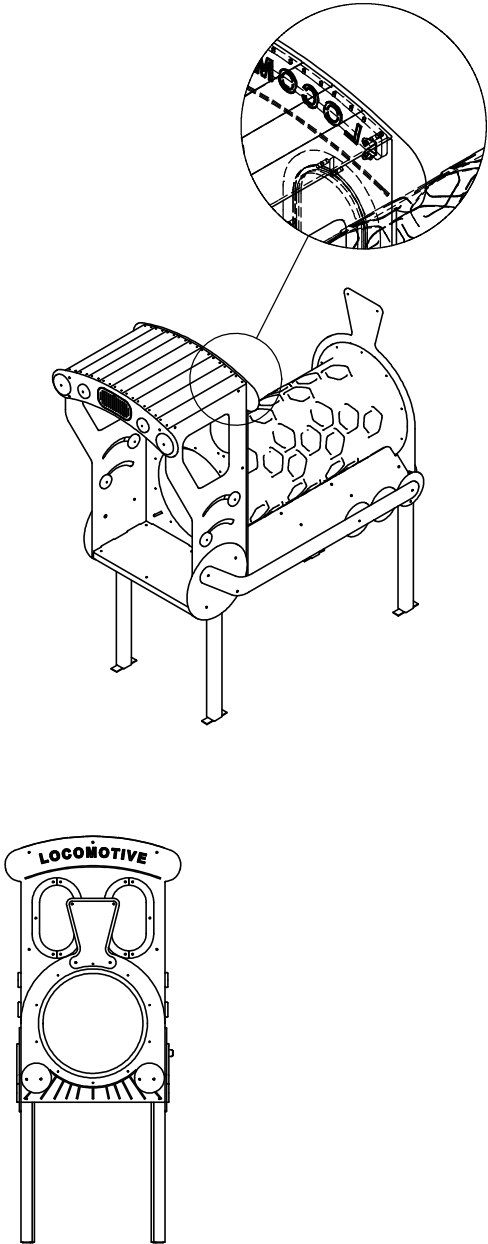

1

 E2

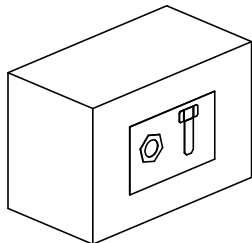


1

NRO

OSA


4030F

 E1

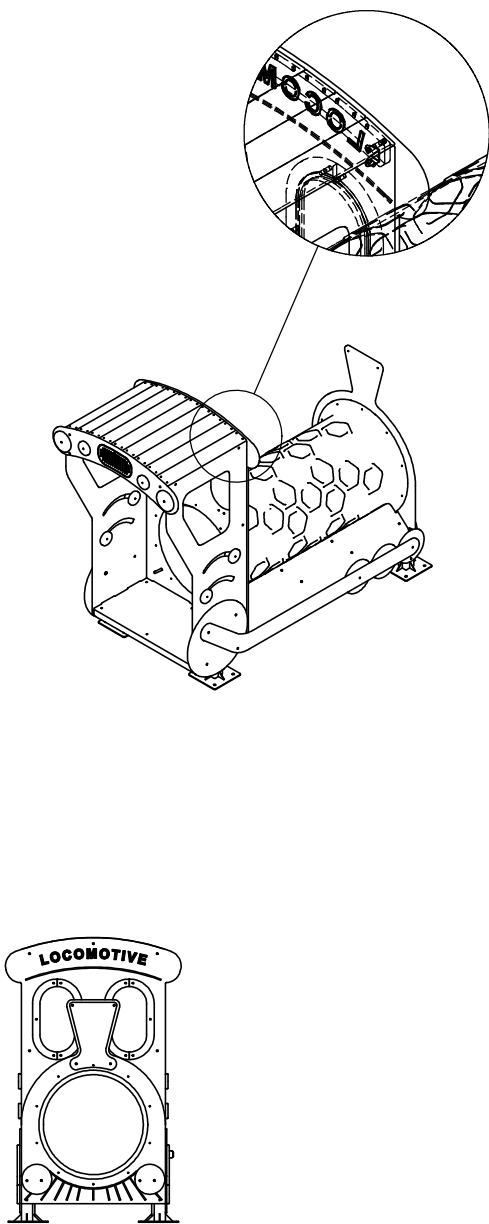


1

  E2

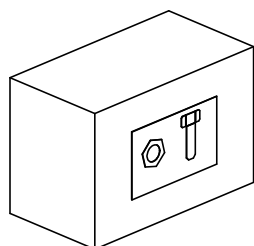



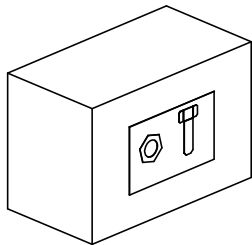

1





4030N



4030F

Nro	Osa			kpl	kpl	
61		-	KL105		16	
213		-	Z_NA_1		1	1
214		-	Z_NA_2		1	1

    4030N  
4030F

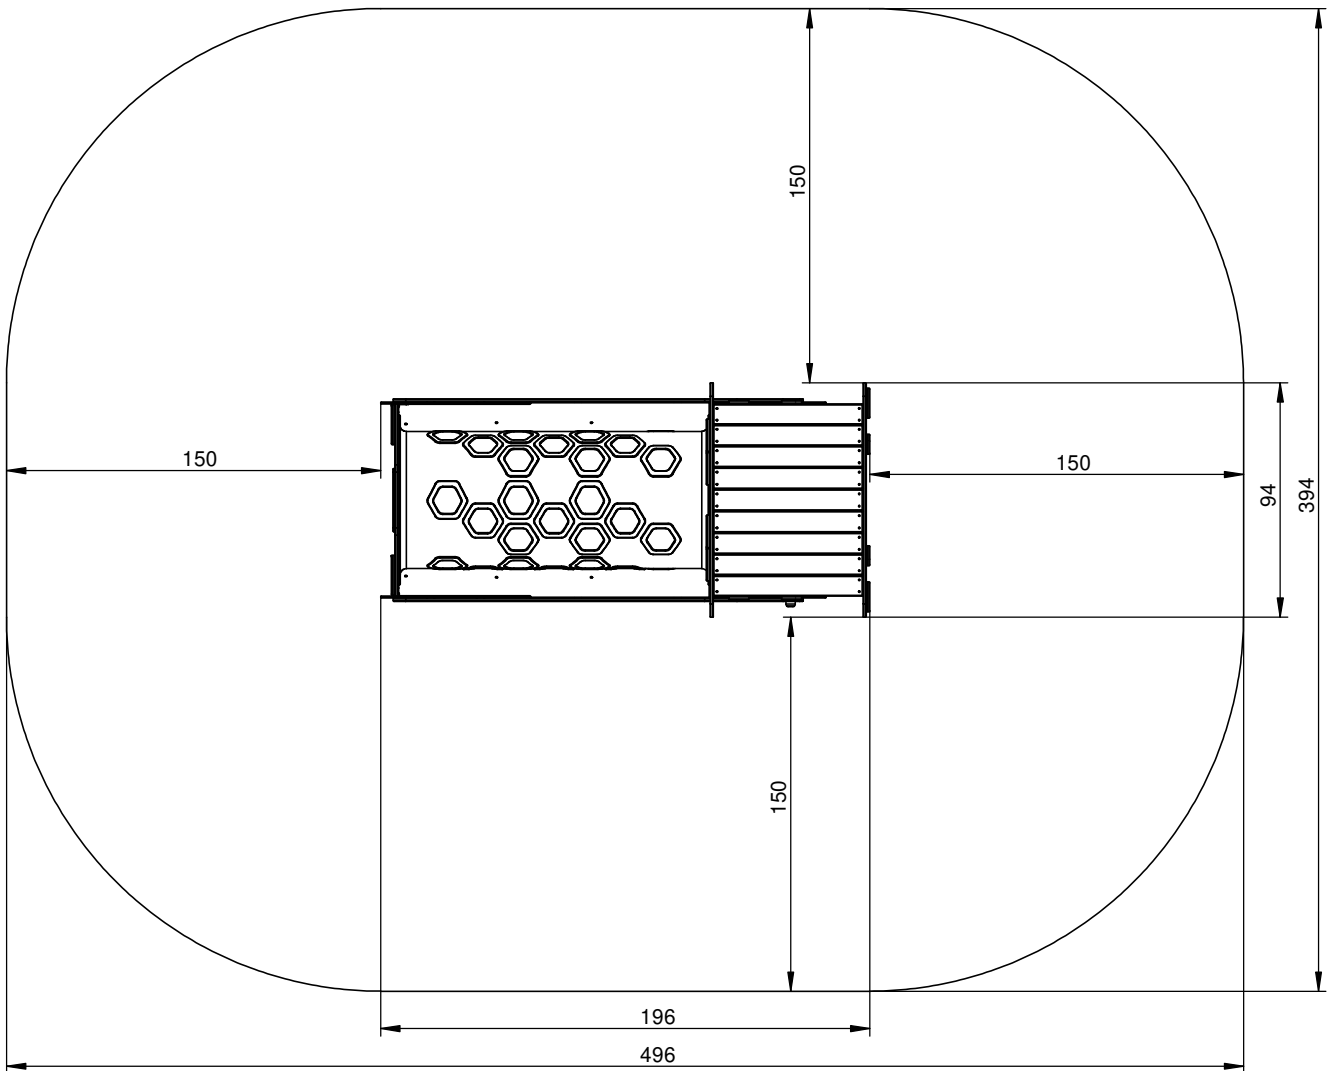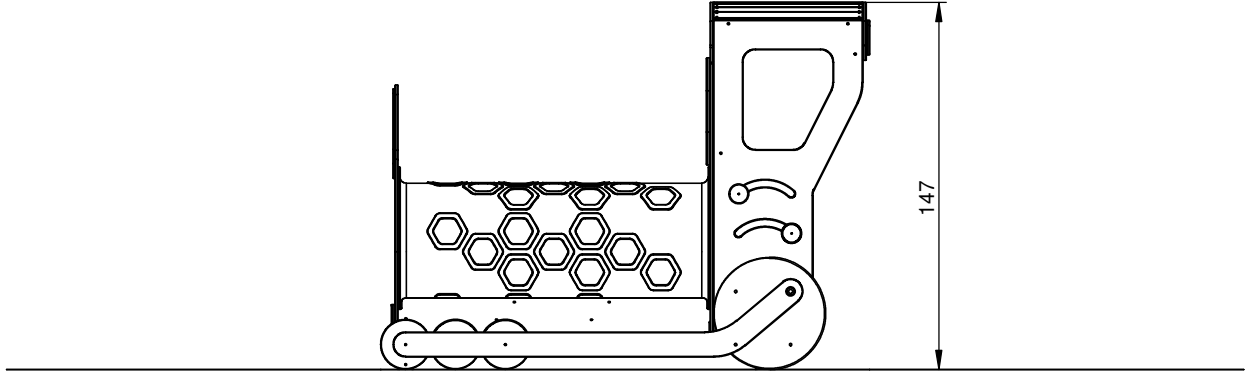
 



4030N  
4030F

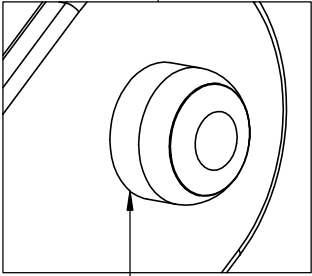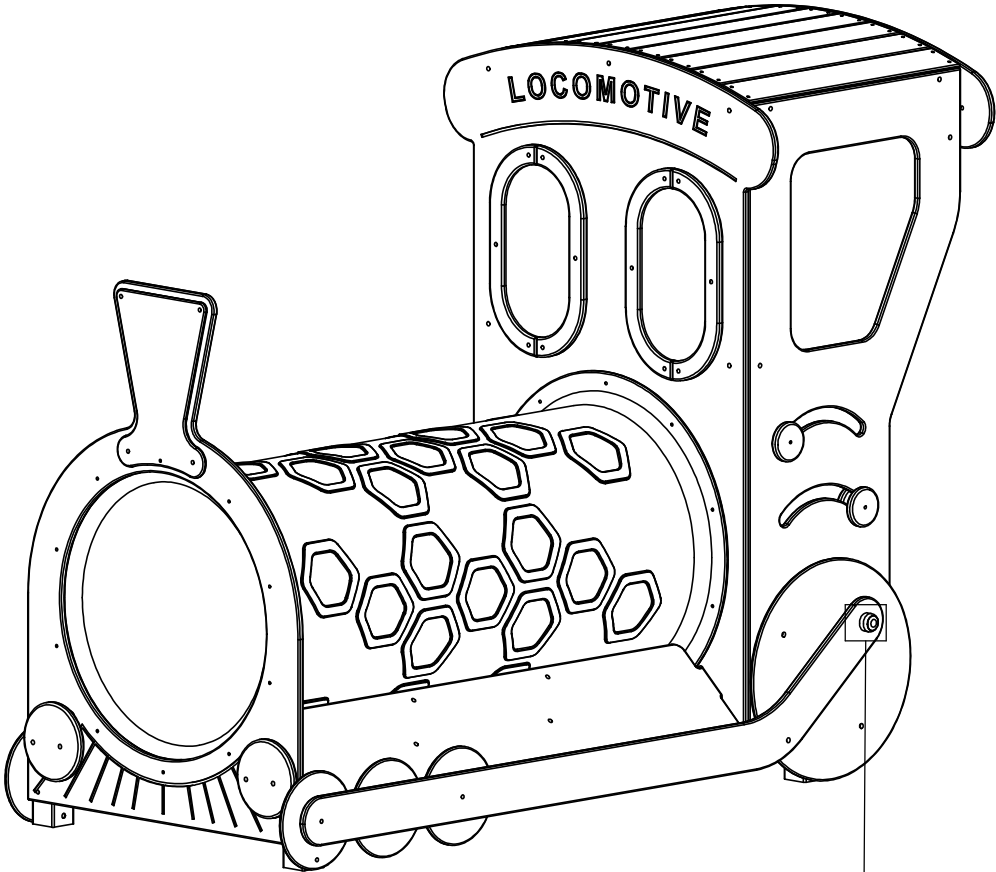



INST\_Z\_6

# INST\_Z\_6

 Nro	kpl	Osa		
213	1		-	Z_NA_1
214	1		-	Z_NA_2

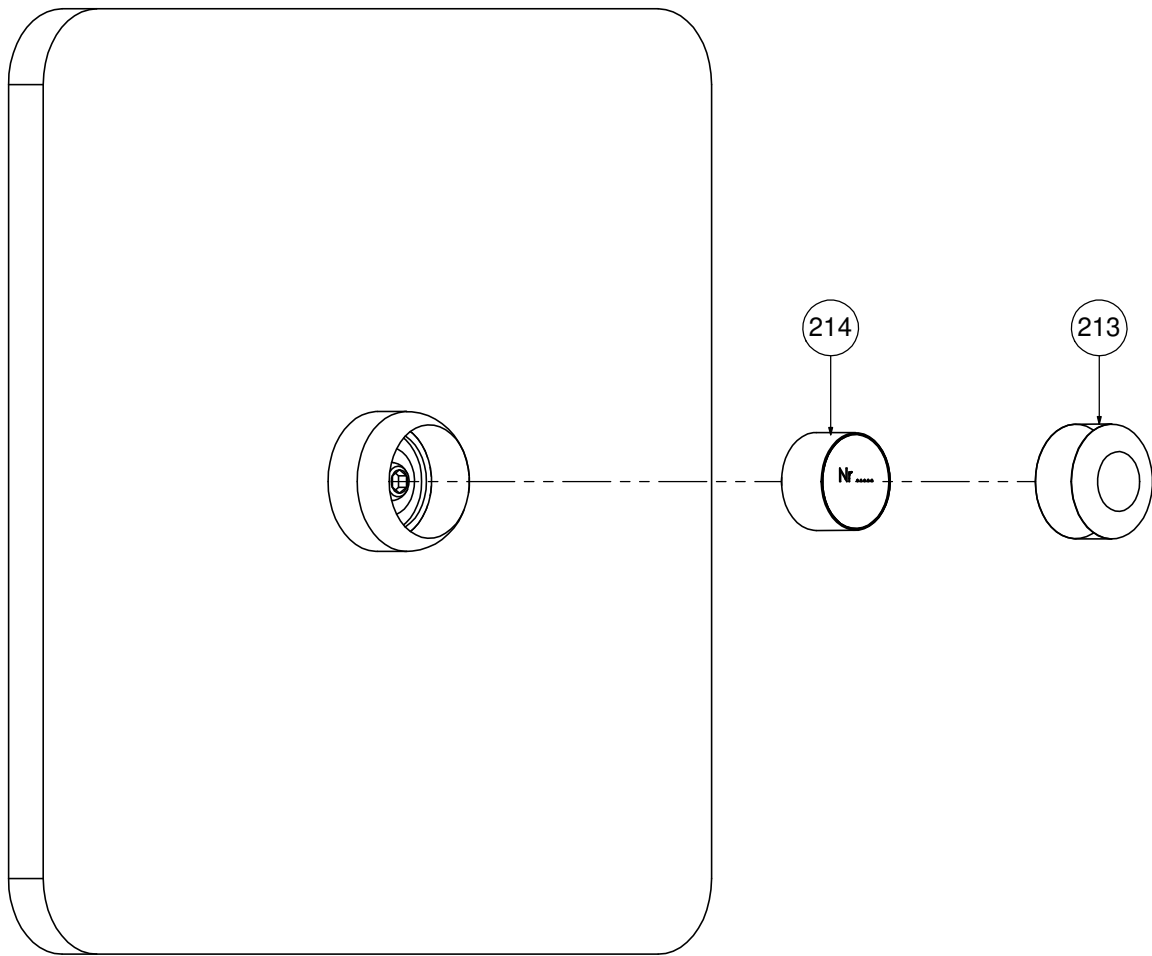


4030N

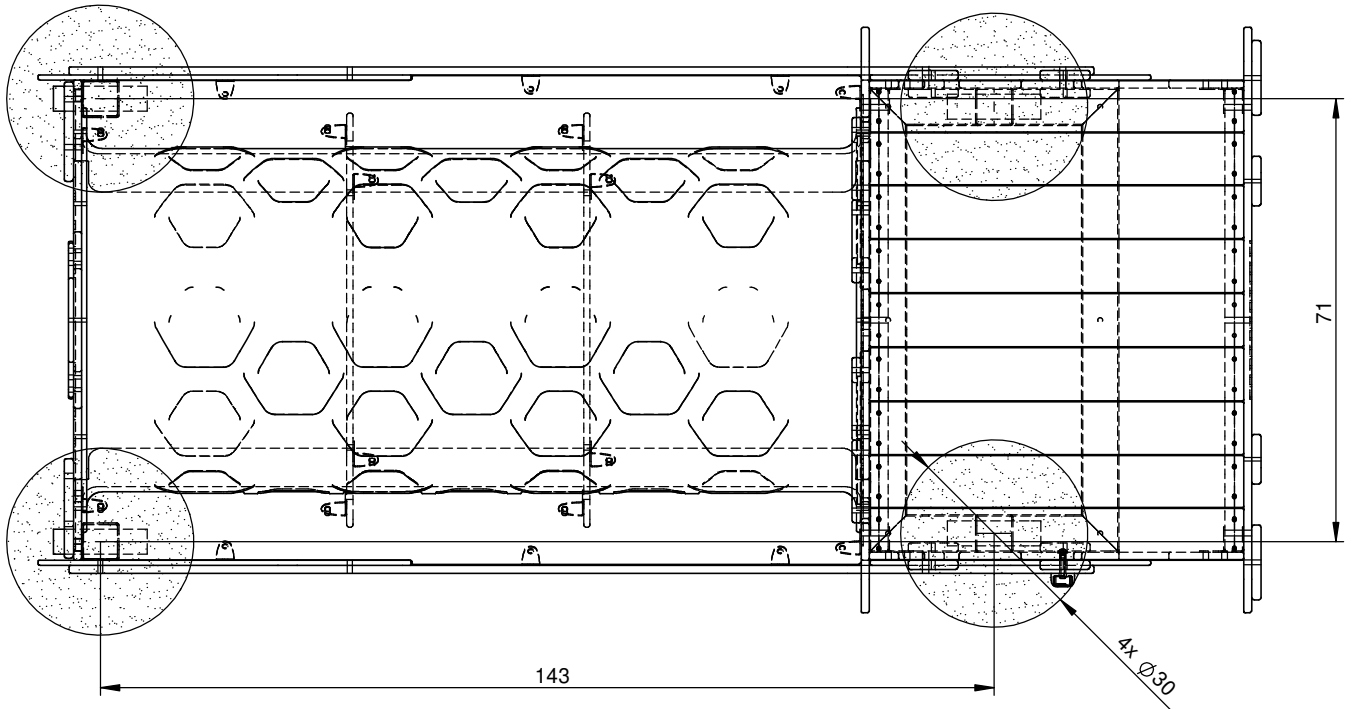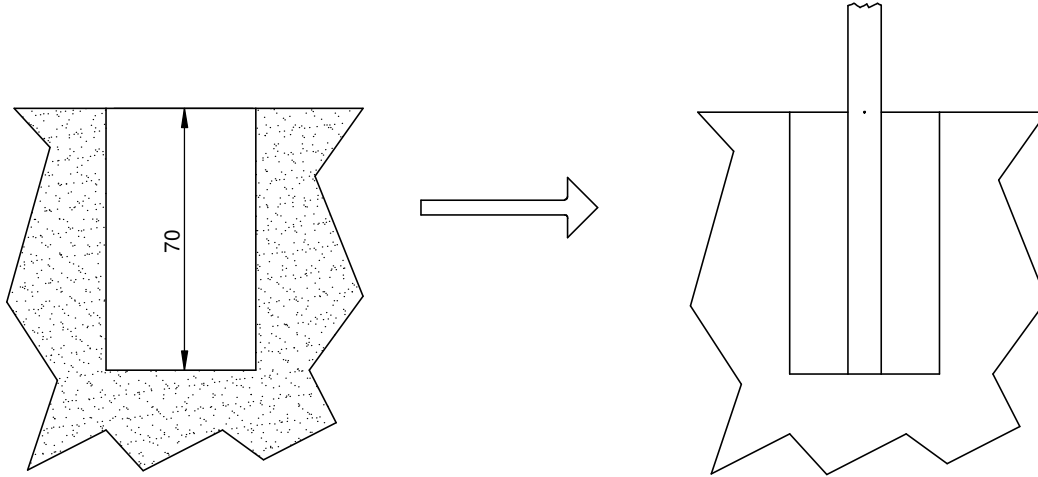  





4030F

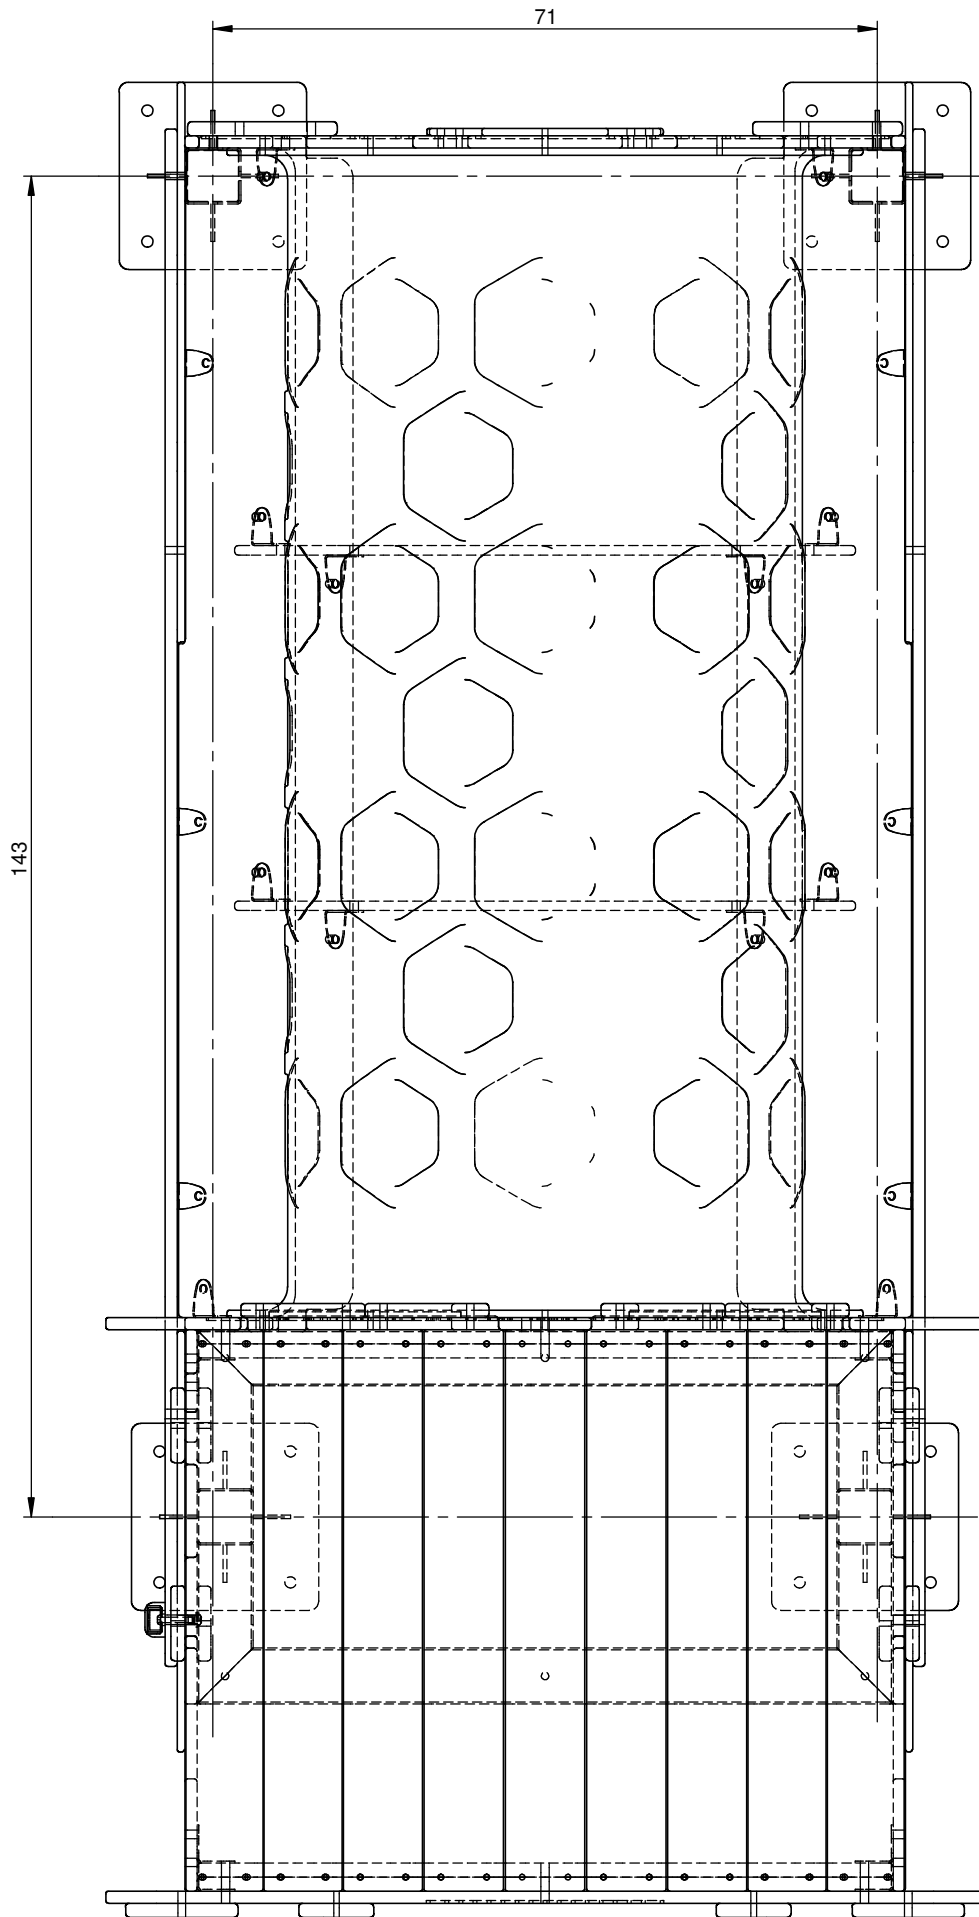 




4030N

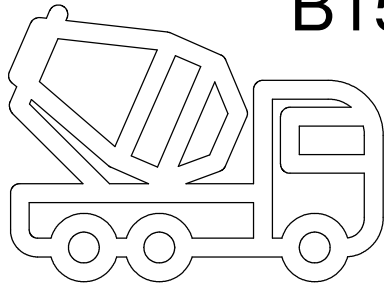 


B15 0,1m<sup>3</sup>

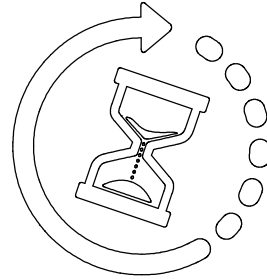 

min. 48H

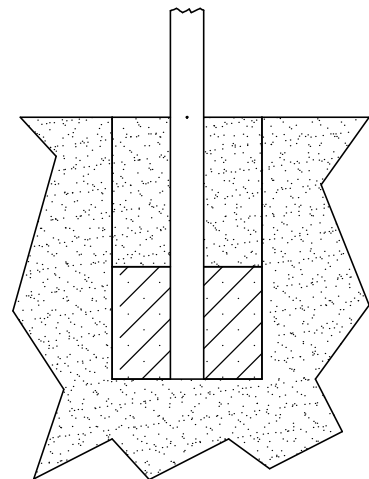 
 
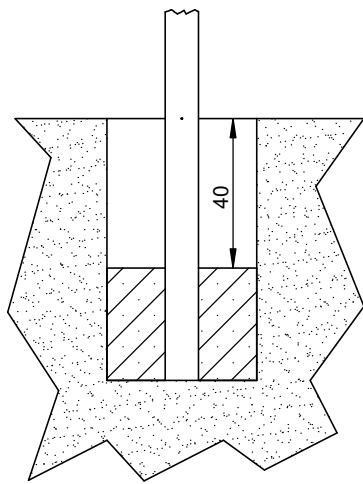 


4030F

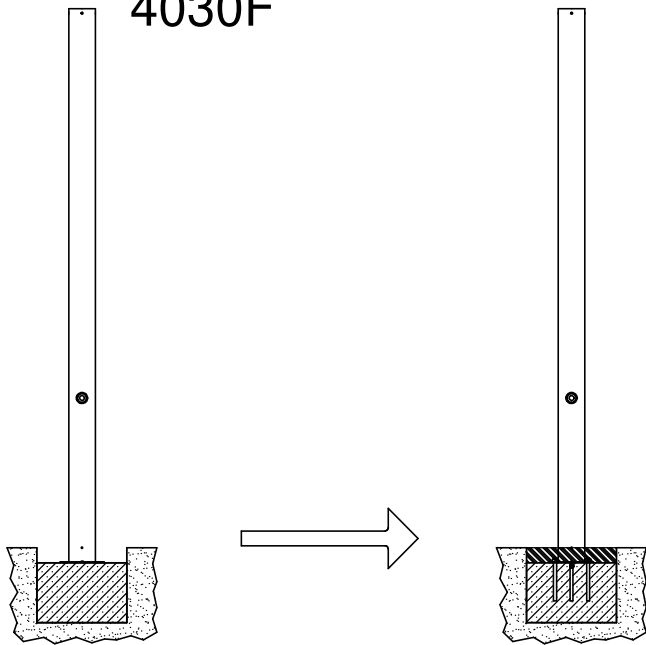 

I

   II

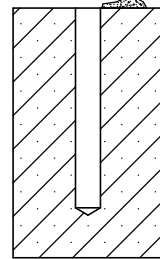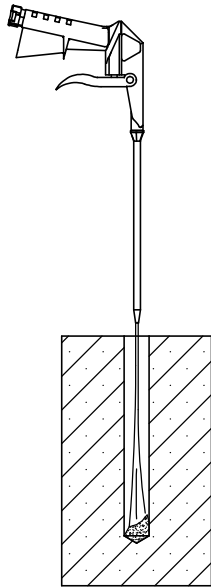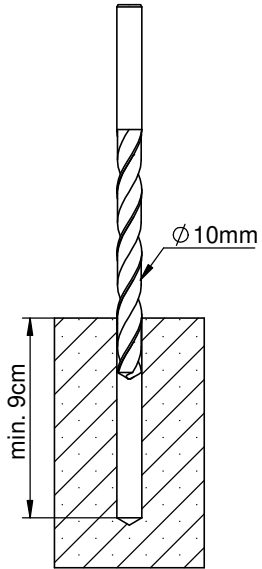

III

IV

V

VI

